
## Paramount BROWNS

## LONG SPAN SHELVING UNIT MSU2020 **Instruction Manual**

**Parts List** 

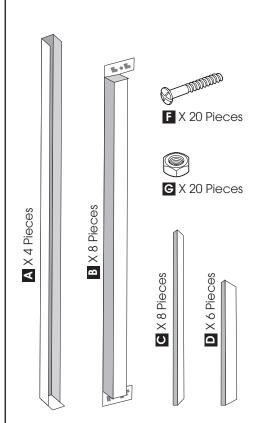



1 X 2

Bolt the Straight Cross Brace **D** and Diagonal Cross Brace C using Bolts **F** and Nut **G** into the Upright Legs A Skip a hole between the Centre Straight Cross Brace and the top Diagonal Cross Brace


Place 2 Inserts **E** Per Shelf on to the Rails on the

Cross Beams B

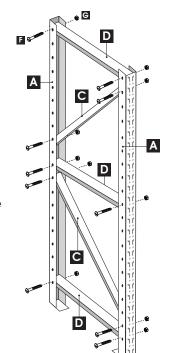


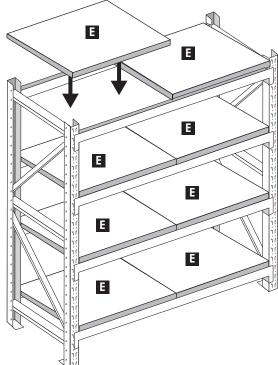

Slide the Cross Beams B into the Slots on the Uprights Legs A Press Down to **Engage Slots** 

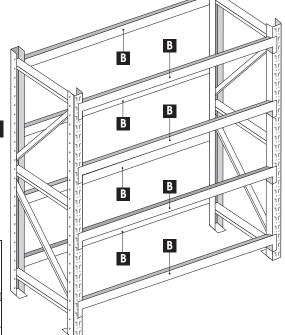

## **WARNING** RISK OF TIPPING

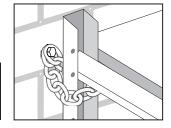

It is recommended to always secure your shelving to the wall with chain. There are different chains, screws and anchors available from Paramount Browns for different wall types and fixing points. (Chain and Fasteners are not included)

Position on a Flat & Level Surface Before Loading